



Ring-Loc™

Valve Pin Cap Kit
Installation Instructions



WARNING

This kit is for use in AirForce airguns only. Do not attempt installation in any other device. Misuse may result in serious injury or death.

**READ ALL INSTRUCTIONS
AND WARNINGS BEFORE
RE-USING THIS AIRGUN.**



WARNING

Make sure the gun is unloaded and tank removed before performing any maintenance or modifications.

Make sure tank is completely empty.

Make sure the gun is not cocked.

Always keep the muzzle pointed in a safe direction.

Replacing the RING-LOC™ Valve Pin Cap.

Step 1. Move the Bolt to the cocked position, opening the loading area. SEE FIGURE 2

Step 2. Using the Wrenches, loosen the Valve Pin Cap from the Loc-Ring. Try to leave the Loc-Ring in its original position. Once loosened, the Valve Pin Cap should easily unthread and allow you to install the new Valve Pin Cap.

NOTE: While the Valve Pin Cap is off, inspect the O-Ring and replace if necessary.

Step 3. After installing the new Valve Pin Cap, use the Wrenches to tighten the Valve Pin Cap and Loc-Ring.

Step 4. Check the position of the Valve Pin Cap to the Cocking Bolt, and adjust if necessary.

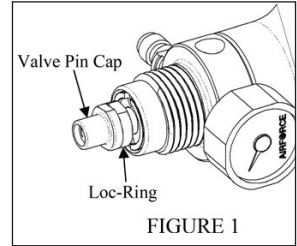


FIGURE 1


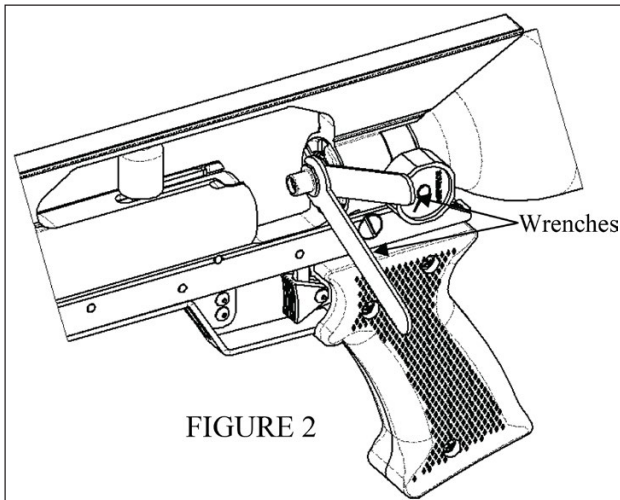


FIGURE 2

Adjustment of the RING-LOC™ Valve Pin Cap and Loc-Ring.

Step 1. Pull the Cocking Bolt to the rear, over on the Valve Pin Cap.
SEE FIGURE 3

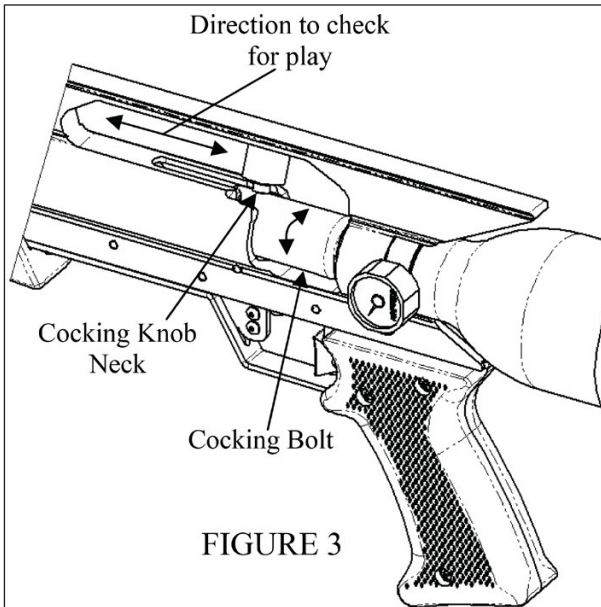

Step 2. Rotate the Cocking Bolt to either side of the gun. The Cocking Knob Neck has to clear the narrow channel in the frame, slipping into the widened area of the channel.

Step 3. With a charge of air in the tank to provide roper resistance, try moving the Cocking Bolt forward against the Frame and back against the Valve Pin Cap. If there is any perceived play, loosen the Loc-Ring and unthread the Valve Pin Cap 1/8th turn at a time, until the play disappears.

NOTE: Make sure the Valve Pin Cap & Loc-Ring is seated after adjustments have been made.



WARNING

**READ ALL INSTRUCTIONS AND
WARNINGS BEFORE RE-USING
THIS AIRGUN.**

**NOTICE: READ ALL INSTRUCTIONS BEFORE
INSTALLATION OR RE-USING THIS AIRGUN**



www.airforceairguns.com

877-247-4867 • 817-451-8966 • (fax) 817-451-1613

P.O. Box 2478 • Fort Worth, TX 76113

*Photographs, drawings, descriptions and other information are purely indicative.
AirForce reserves the right to change, modify or discontinue products or features at any time.*

Rev. 02/18